

109A Carmichael

Basic Instructions for Multimedia Equipment in 109A Carmichael Hall.

These instructions will allow you to operate the equipment that comprise the multimedia system in this room. For complete operating instructions for this equipment, please refer the the manufacturer's operation manuals. Contact the New College office for the manuals.

The equipment consists of:

- **NEC Plasma Sync 50XM5** large screen plasma monitor (located on wall above chalkboard)
- **Windows-based Dell PC** with flat-screen monitor, keyboard and mouse
- **JVC VCR**
- **Toshiba DVD** player



Operating the Multimedia System

Step 1. Look for red "Standby" light in lower right-hand corner of plasma monitor


If red "Standby" light does not appear, turn plasma monitor power switch "On" (See illustration.)

Turn plasma monitor "On" by pressing green [ON] button at top of NEC remote control

"On" is indicated by green light in lower right corner of the plasma monitor.

Turn DVD and/or VCR "On" by pressing the power buttons (on remote controls or equipment)

Turn PC "On" by pressing power button. Allow PC to boot-up
Make sure PC monitor is also "On"

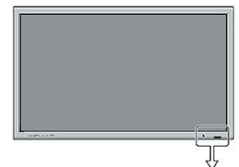

Plasma Monitor
power switch
& indicator lights

Step 2. Use **NEC Remote Control** to select source to view on plasma monitor

- **PC** - [RGB/PC] button (White button below {Standby})
- **VCR** - Press [VIDEO] button until "VIDEO 1" is displayed on plasma montior
- **DVD** - Press [VIDEO] button until "VIDEO 3" is displayed on plasma montior

Step 3. Operating the equipment

Use **NEC Remote Control** to adjust volume

- Increase with (+) button or decrease with (-) button

Use **Toshiba** remote control to operate DVD player

Use **JVC** remote control to operate VCR or to view cable television channels



NEC remote control



DVD remote control



VCR remote control